

## Timer Control Operating Instructions

**TO START-** Press start button once ( time is preset at 2:00 Hrs.)

**TO CHANGE BURNER TIME-** Press and Hold the Set time button and the  $\Delta$  Key to Increase time or the  $\nabla$  Key to decrease time. Time is displayed in Hours and Minutes. When burner time is set press the start button and burner will fire

**TO VIEW TEMPERATURE-** Press the Temperature Button once.

**TO VIEW TIME-** Press the Time Button Twice

**START BURNER -**Press start button