



THE CAPACITY OF THE INTERNAL RELAYS IS 6 AMP. "MOTOR LOAD". WE RECOMMEND INSTALLING EXTERNAL RELAYS ON "ON/OFF" STAGES HOOKED TO MOTORS.

FROM CONTROL

COIL

COIL POWER SOURCE

COM

N.O.

COM

N.O.

STAGE OUTPUT

TO DISTRIBUTION PANEL STAGE INPUT