

FLEXIBLE AUGER DISCHARGE HEAD KITS COMPONENT REQUIREMENTS

COMPONENT →	COMPONENTS / QTY			
	BASIC HEADS		ELECTRIC BOX	
	7.5	4.5	2.0	2.1
SHIP WEIGHT →	730462 Basic Steel Head	730463 Basic Poly Head	730530 Basic Control Box	730535 Relay Control Box
COMPONENT CATALOG NUMBER & DESCRIPTION →				

CATALOG NUMBER OF DISCHARGE HEAD KIT		BOOT KIT DESCRIPTION	SHIP WEIGHT	QUANTITY REQUIRED			
NEW NUMBER - KITTED	OLD STOCK NUMBER			730462	730463	730530	730535
730510	730160	Steel Discharge Head With Basic Control - For 1ph applications with mechanical switch - For all 3ph applications	9.5	1		1	
730515	730042 730125 730000	Steel Discharge Head With Relay Control - For 1ph applications with proximity sensor or mechanical switch	9.6	1			1
730462		Steel Discharge head for Use With FlexTra	7.5	1			
730530		Poly Discharge Head With Basic Control - For 1ph applications with mechanical switch - For all 3ph applications	6.5		1	1	
730535		Poly Discharge Head With Relay Control - For 1ph applications with proximity sensor or mechanical switch	6.6		1		1
730463		Poly Discharge head for Use With FlexTra	4.5		1		

NOTES:

1. There is no direct replacement for the 730000 discharge head with cords - all discharge heads are now without cords.
2. 730465 proximity sensor must be ordered separately - not included with any discharge head kit.