

CIRCULATING FAN MOUNTING




OVERVIEW

This manual will cover all of the various mounting hardware and the methods used to install these variations.

WALL BRACKET INSTALLATION

Step WB1.


Identify and preassemble the wall bracket, diagonal support & fan swivel along with the 7/16" x 4 1/2" S.S. Hx Hd bolt & S.S. nyloc hex nut as shown below.

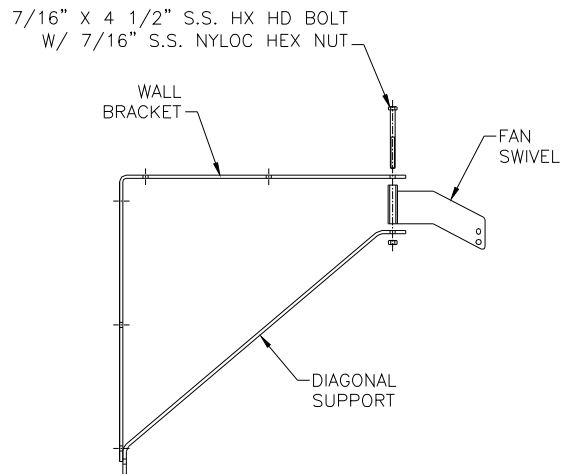

STEP WB1

Step WB2.

Attach the preassembled wall bracket to the wall in the desired position using 3 - #14 x 1 1/2" type A S.S. Hx Wsh Hd lag screws. Make certain that these lag screws are installed into 2 X framing members.

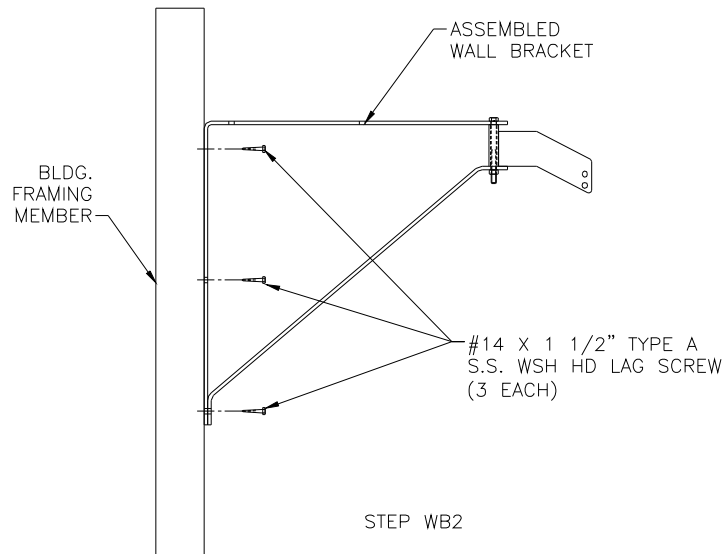

WARNING If these ventilation products are used to support life in agricultural structures where failure of the system could result in loss or injury, the user must provide an adequate backup and alarm system. The user must accept all risks of such loss or injury due to the possible failure of the ventilation system.

CAUTION Do not install fan with moving parts within seven feet of floor or grade level without a guard that complies with OSHA Regulations. Do not use unless electrical wiring complies with all applicable codes. Do not wire without providing for power source disconnect at the fan itself. Do not service except by a qualified maintenance technician and only after disconnecting the power source. Do not install in room where flammable material is stored or flammable vapors might build up. Failure to observe all of these precautions can result in serious injury or death.

SERVICE AND TECHNICAL ASSISTANCE

Your dealer or the Raydot Service Department will be happy to answer all technical questions which will improve your use of the Galvanized fan series. Be prepared with the model number and necessary information before you place a call to your dealer or Raydot L.L.C. If your fan requires service when the warranty period has expired, please contact your dealer for assistance or return the unit to Raydot L.L.C. for repair.

Inquiries



Raydot & ValAir are Divisions of VALCO Companies

P.O. Box 117

210 E. Main Street

Coldwater, OH 45828

Ph. 800-998-2526