


Spacer Kit, Radiant Heater Hanging Bracket




STEP 1.

Read through all steps completely prior to beginning. Unpack and become familiar with all parts and hardware supplied with the Radiant Heater Hanging Bracket Spacer Kit.

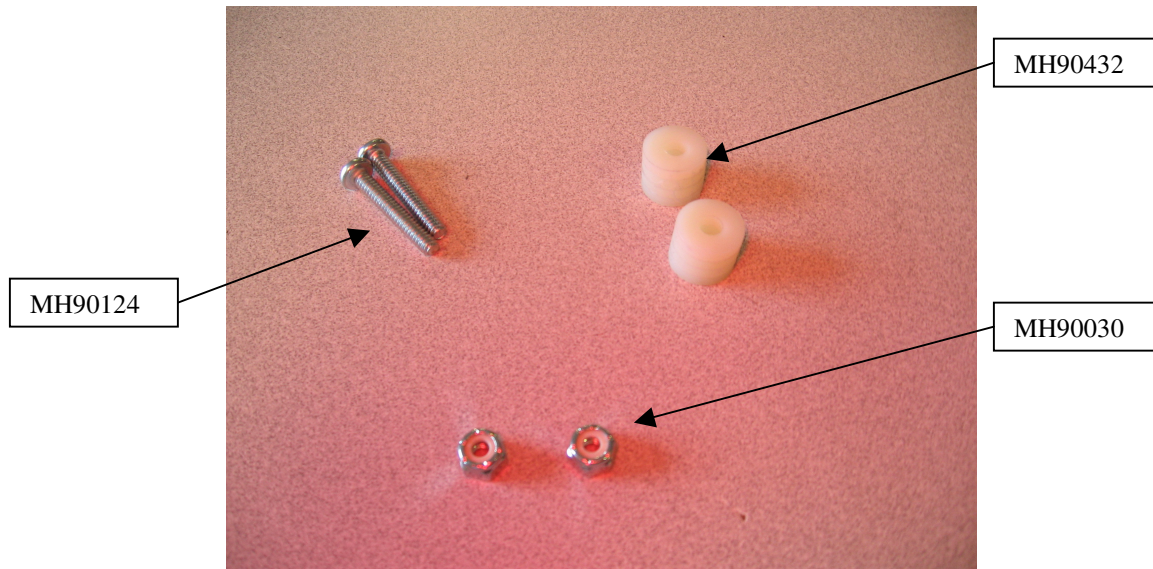

STEP 2.

Insert the two #10-24 x 1 ¼ Screws (Part # MH90124) through the heater mount flange and apply the Aluminum Spacers (Part # MH90432) to the screws as shown below. The screw must be insert from the side of the flange opposite the Radiant Sensor Bracket.

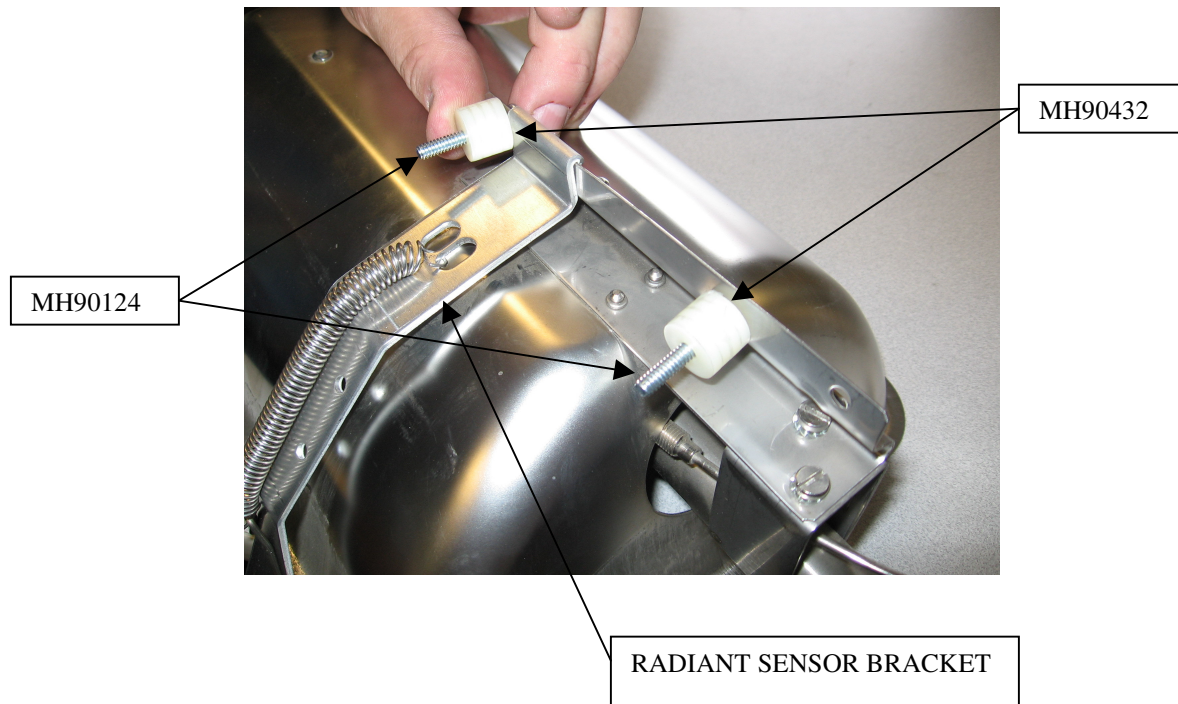


STEP 3.

Apply the Radiant Heater Hanging Bracket (Part # H517A) to the screws from Step 2 with the long rod between the heater plate on hanging bracket and the mount flange on the heater.



STEP 4.

Fasten the Radiant Heater Hanging Bracket into place using the two #10-24 hex nuts and tighten in place. Refer to the photo at right below to note the position of the notch on the Hanging Bracket with respect to the Radiant Sensor Bracket.

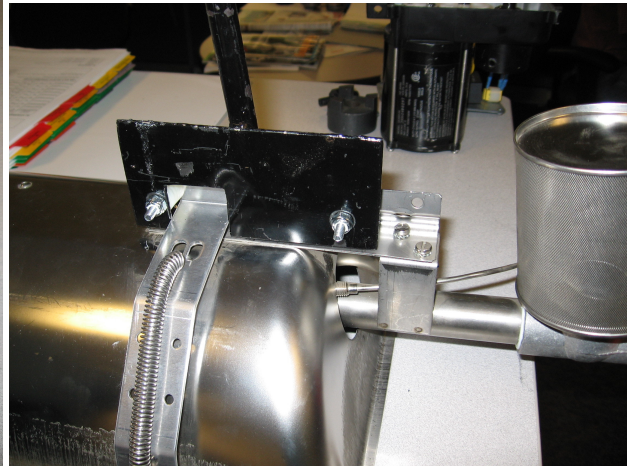

INQUIRIES



**VALCO COMPANIES
P.O. BOX 117
210 E. MAIN ST.
COLDWATER, OH. 45828
Ph. 800-998-2526**