



## PFACT Actuator and Pulley Set Installation

Please read these instructions carefully. The PFACT Actuator must be mounted and installed correctly or it will void the warranty. Instructions below reference only the first pulleys that the cable comes in contact with after leaving the actuator arm. All other pulleys will be mounted based on your application.


Pulley set must be mounted a minimum of 24" from the end of the extended actuator arm.

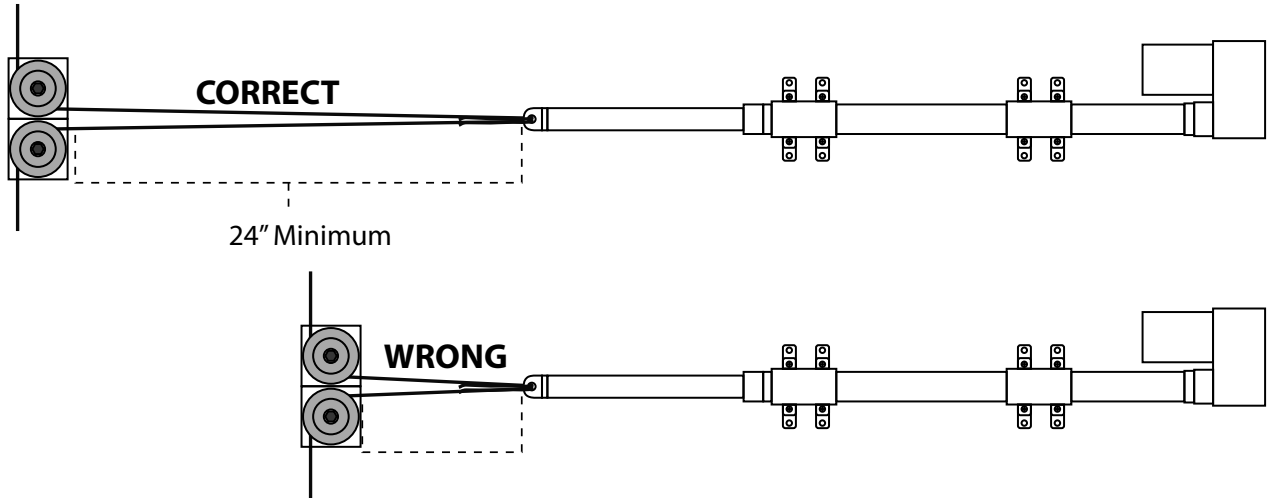

Pulley sets tracks must align on the same plane with actuator arm.

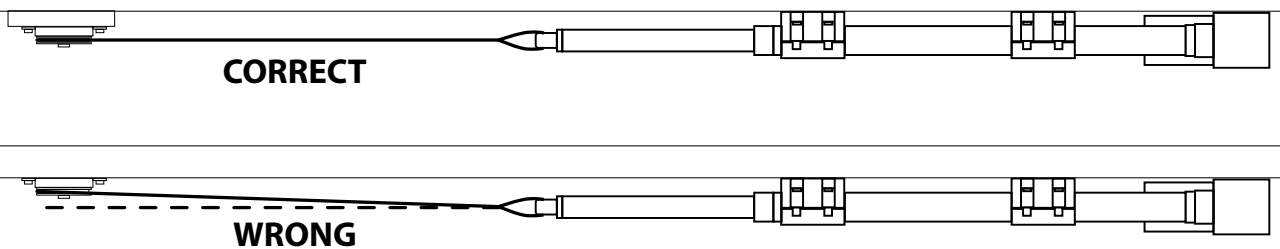


Pulley sets tracks must be no more than 1/2" apart and align with the actuator arm.

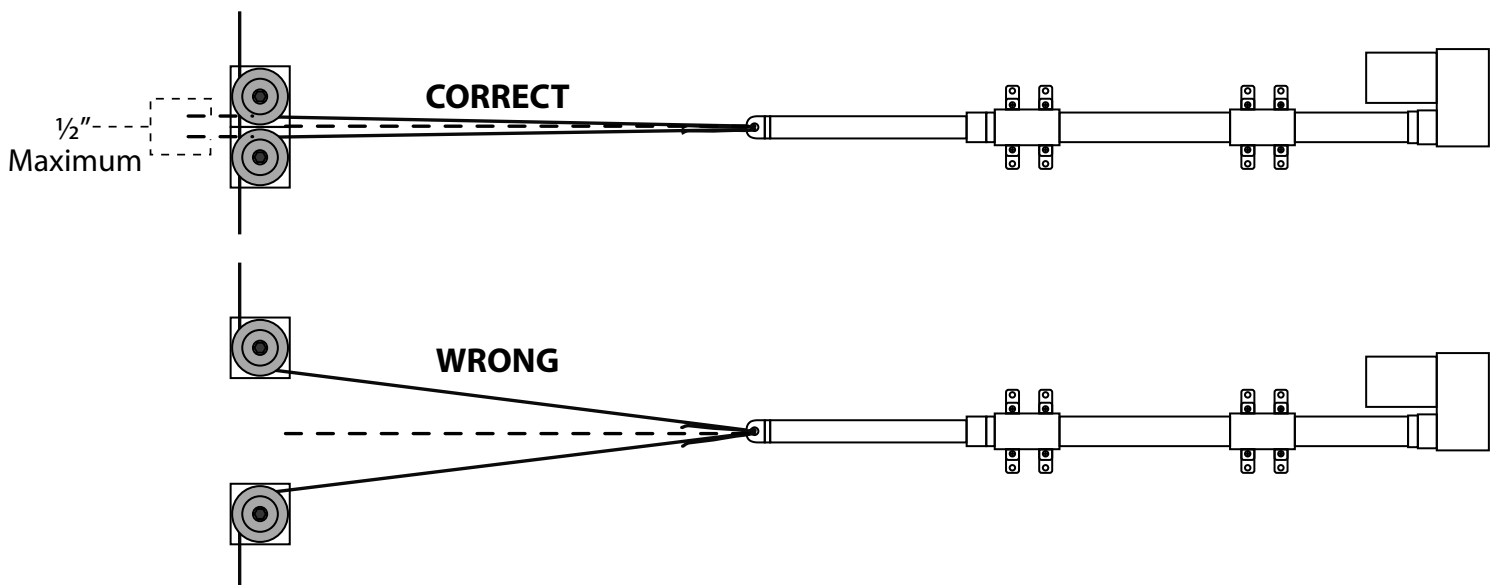


## PFACT Actuator and Single Pulley Installation

Please read these instructions carefully. The PFACT Actuator must be mounted and installed correctly or it will void the warranty. Instructions below reference only the first pulley that the cable comes in contact with after leaving the actuator arm. All other pulleys will be mounted based on your application.

Pulley must be mounted a minimum of 24" from the end of the extended actuator arm.

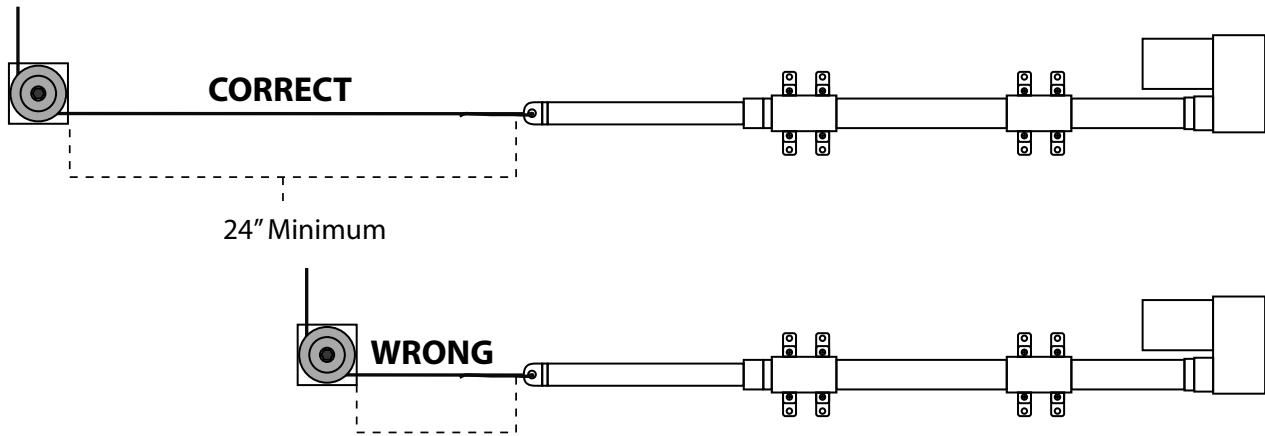

Pulley track must align on the same plane with actuator arm.

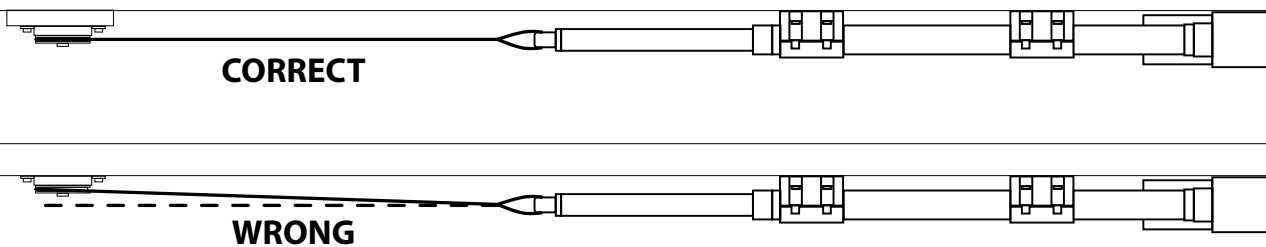

Pulley track must align with the actuator arm.

