

AgriAlert

NOTE: if enabled, a valid password must be entered for making modifications or alarm acknowledgements.

System On/Off	Phone Numbers	Temperature / Set Points
<ul style="list-style-type: none"> - press "On/Off" key - enter password. enter - to modify. enter 	<p>To view phone numbers:</p> <ul style="list-style-type: none"> - press "Phone Numbers" key - "Cancel" to quit or <p>To modify phone #: . . . enter</p> <ul style="list-style-type: none"> - select position. enter - enter phone number. . . enter - use arrow keys to choose: 	<p>To view settings:</p> <ul style="list-style-type: none"> - press "Zone" key - select zone number. . . . enter - "Cancel" key to quit or <p>to modify settings: . . . enter</p> <ul style="list-style-type: none"> - low set point. enter - high set point. enter
Modify Password	<div style="border: 1px solid black; padding: 2px; display: flex; justify-content: space-between;"> Home - Cellular - Beeper Pager </div>	
<ul style="list-style-type: none"> - press "Password" key - to modify enter - enter "master" pw. enter - scroll to select pw. enter - enter "new" password twice 	<div style="display: flex; justify-content: space-between;"> <div style="width: 45%;"> <ul style="list-style-type: none"> - enter - "Cancel" key to quit </div> <div style="width: 45%;"> <ul style="list-style-type: none"> - enter - code. . . enter - pager delay - "Cancel" to quit </div> </div>	<p>Note: to jump to the next stage and bypass the info screens, press the "Cancel" key as required.</p>
Bypass / Activate Zone		
<ul style="list-style-type: none"> - press "Bypass / Activate" - select zone / partition - select number enter 		

Zone Lights	Zone light on: zone is activated (no alarm)	Zone light flashing fast: there is an alarm	Zone light flashing slow: zone is bypassed	Zone light off: zone is disabled
--------------------	--	--	---	---

TO STOP ALARM: (if the system is dialing) press the "Cancel" key first then press the (1) key to acknowledge the alarm.



DIM.: 6.100" X 5.600" R.125"