


PREVENTING WATER DAMAGE TO LOAD CELLS

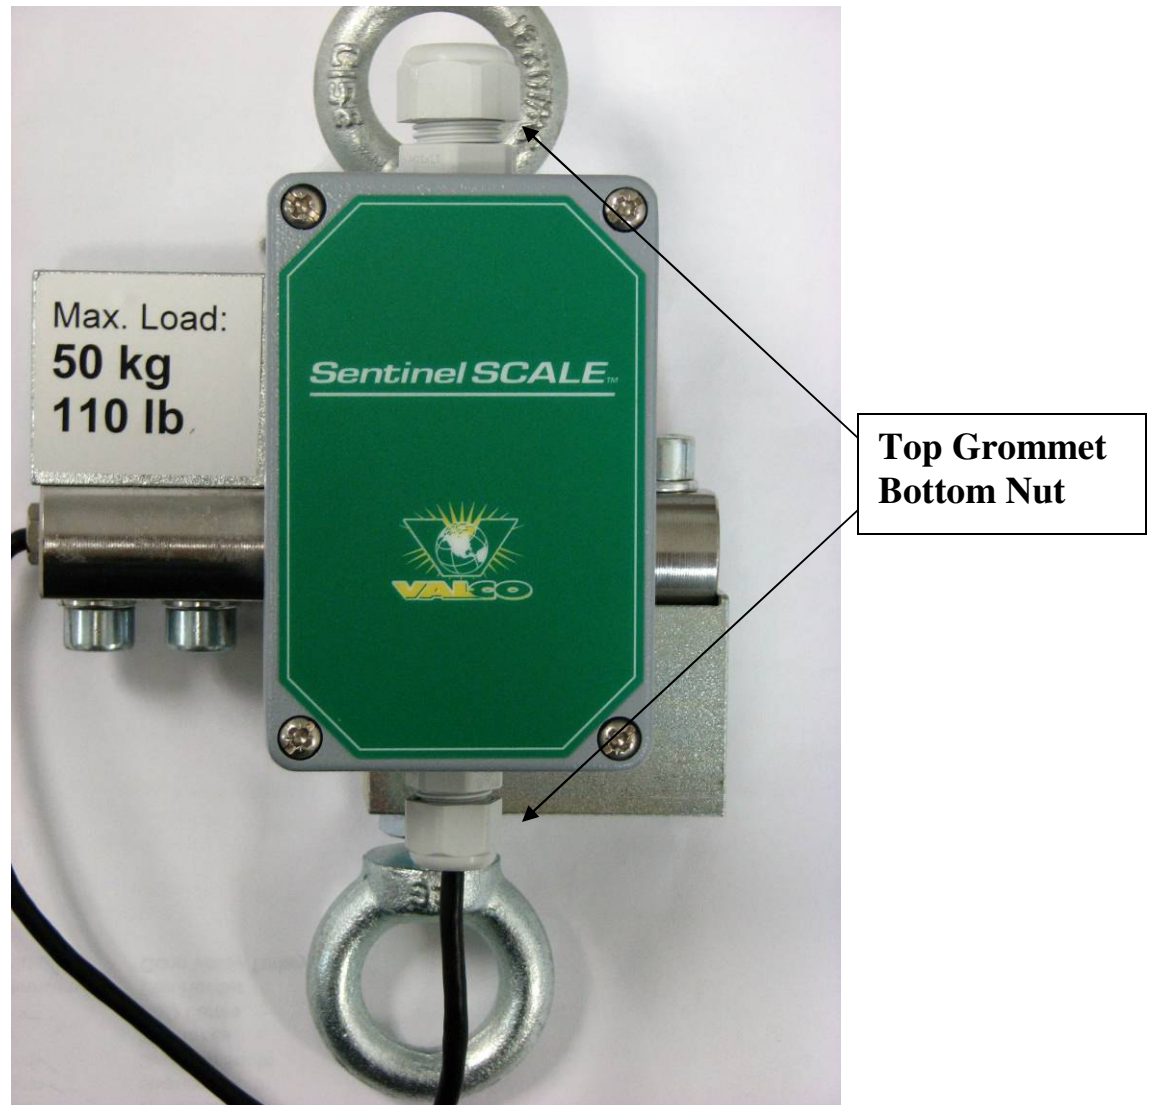

NOTE: The load cells have water tight grommets. The bottom grommet is factory tightened so no action is required on that one. However, the top grommet provides access to the wiring of the load cell and the only way to ensure that it will be water tight is to ensure that when the wiring is completed the top grommet is tightened down with a pair of pliers. In order that the bottom thread in the unit is not stripped, hold the bottom nut still with one set of pliers while turning the top grommet clockwise until it is secure. When done, hang the load cell from the ceiling hook.