



# CID CLEAN



## WATER LINE CLEANER

CID CLEAN is an ideal product for the prevention and removal of organic deposits and heavy soils from the drinking water system

### DIRECTIONS FOR USE :

#### 1. CLEANING WHEN THE SYSTEM IS NOT IN USE

To clean the system use a 3% solution / 1:33 or 4 ounces per gallon of dilution and leave to work in the system for 24 hours.

If applied at 1:128 or 1 ounce per gallon of dilution leave to work in the system for 48 hours.

Rinse with plenty of clean water to make sure all product is out of the entire system including nipples or cups.

#### 2. CLEANING AN OPERATING SYSTEM (ANIMALS PRESENT)

Mix Cid Clean at 2 ounces per gallon of water to make a stock solution and set metering pump at 1 ounce stock solution to 1 gallon of water / 1:128.

After every 2 or 3 days the dosage may be raised 1 ounce of Cid Clean per gallon of stock solution until a maximum of 4 ounces per gallon of stock solution is reached.

Never mix Cid Clean in the same stock solution with any other product.

**SAFETY :** CID CLEAN contains 50% stabilised hydrogen peroxide. Causes burns. Protect eyes, face and skin. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice. Keep out of reach of children. Do not mix CID CLEAN with any other chemical, use only with water.

**PRECAUTIONS:** If cleaning the operating system stop use of Cid Clean 12 hours prior to vaccinating or medication via the water line.

While cleaning the operating system never mix any other product with Cid Clean.

R20/22 - Harmful by inhalation and if swallowed R34 - Causes burns R8 - Contact with combustible material may cause fire S14 - Keep away from oxidizable substances S20/21 - When using do not eat, drink or smoke S23 - Do not breathe gas/fumes/vapour/spray (appropriate wording to be specified by the manufacturer) S26 - In case of contact with eyes, rinse immediately with plenty of water and seek medical advice S28 - After contact with skin, wash immediately with plenty of water S36/37/39 - Wear suitable protective clothing, gloves and eye/face protection S45 - In case of accident or if you feel unwell, seek medical advice immediately (show the label where possible) S7 - Keep container tightly closed


Lot:  
Prod:  
Exp:

UN 2014 HYDROGEN PEROXIDE,  
AQUEOUS SOLUTION , 5.1(8), II

2,6 gal



Corrosive

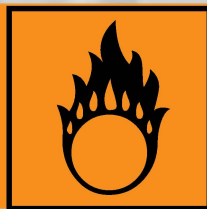

Oxidizing



(01) 0 5414829 03303 6 (10)

**CID LINES**  
INNOVATIVE HYGIENE SOLUTIONS

CID LINES N.V. • Waterpoortstraat 2, 8900 Ieper - Belgium  
T +32 (0) 57 21 78 77 • F +32 (0) 57 21 78 79 • info@cidlines.com

3.3932v4