

Temperature Controller

OVATION 22

User's Guide

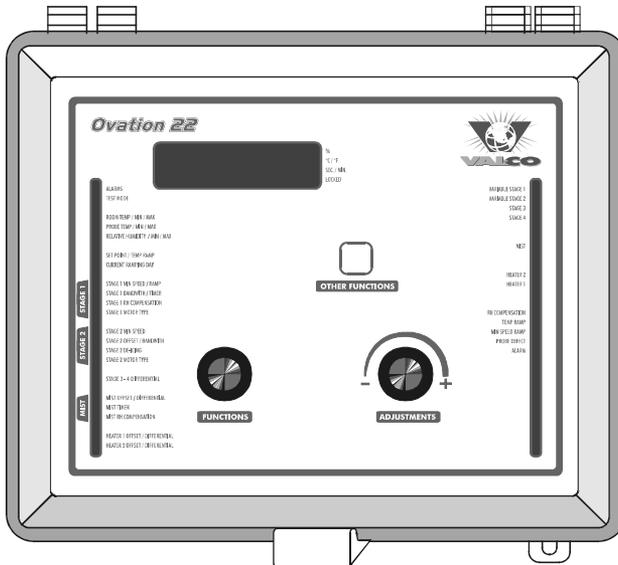

Read this guide carefully before using the controller.

TABLE OF CONTENTS	2
PRECAUTIONS	3
FEATURES	4
LOCATION OF THE CONTROLS	7
Controller Status LEDs	8
Internal Switches	8
Mounting Instructions	9
Connections	9
INSTALLATION	9
Motor Types	10
Heating / Cooling Option	11
Temperature Probes	12
CHANGING THE PARAMETER SETTINGS	14
Using the Display	14
Locking the Parameter Settings	15
TEMPERATURE SETTINGS	16
Temperature Units	16
Viewing Temperatures	16
Temperature Set Point	19
Temperature Ramp	20
VENTILATION SETTINGS	24
Cooling Operation	24
Minimum Ventilation Cycle	26
Minimum Ventilation Cycle Settings	26
Humidity Compensation	28
Minimum Ventilation Speed Ramp	31
Differential Settings	35
De-icing of Stage 2 Fans	38
Mist Cooling	40
HEATER SETTINGS	43
ALARM SETTINGS	48
TEST MODE	49
TROUBLESHOOTING GUIDE	50
TECHNICAL SPECIFICATIONS	54
FACTORY SETTINGS	55
MEMORY CARD	56
GLOSSARY	59

PRECAUTIONS

We strongly recommend installing supplementary natural ventilation as well as a back-up thermostat on at least one cooling stage (refer to the wiring diagram enclosed with this user's manual to connect the thermostat).

Although fuses at the input and outputs of the controller protect its circuits in case of an overload or overvoltage, we recommend installing an additional protection device on the controller's supply circuit.

The room temperature where the controller is located **MUST ALWAYS REMAIN BETWEEN 32° F AND 104° F (0° C TO 40° C)**.

To avoid exposing the controller to harmful gases or excessive humidity, it is preferable to install it in a corridor.

DO NOT SPRAY WATER ON THE CONTROLLER

FOR CUSTOMER USE

Enter the serial number located on the side of the controller below for future reference.

Model number: OVATION 22

Serial number: _____

FEATURES

The OVATION 22 is an electronic device used for environmental control in livestock buildings. It allows the user to maintain a specified target temperature by controlling the operation of ventilation and heating equipment. Two stages of variable speed fans can be connected to the controller, as well as two stages of either constant-speed fans or heating units. In addition, one of the constant-speed fan stages can be configured as a mist cooling stage.

The main features of the OVATION 22 are as follows:

FIVE-DIGIT DISPLAY

A five-digit display provides a high level of accuracy, allowing the user to specify a temperature to within one tenth of a degree (in Fahrenheit or Celsius units).

PILOT LIGHTS

Pilot lights indicating the state of outputs allow the user to monitor the operation of the system without having to enter the building.

MINIMUM VENTILATION CYCLE

When ventilation is not required for cooling, the first stage fans can be operated either continuously or intermittently to reduce the level of humidity and supply oxygen to the room.

RAMPING FUNCTIONS

Ramping functions provide an automatic adjustment of the set point and minimum ventilation fan speed over a given period of time.

CHOICE OF TEN MOTOR TYPES

The variation in motor speed resulting from a change in voltage will depend on the make and capacity of the motor. In order to achieve a high degree of compatibility between controller and motor, the user can choose from among ten different motor types, thus ensuring that the correct voltage is supplied.

ZONED OR CASCADING HEATERS**HIGH/LOW TEMPERATURE ALARM OUTPUT****HUMIDITY COMPENSATION**

The stage 1 minimum speed can be adjusted automatically as a function of relative humidity. As humidity increases, the minimum speed of stage 1 fans increases proportionally to compensate for the change.

FULL-SPEED FAN START-UP

In order to overcome the inertia of the ventilation system components and de-ice the fan blades in cold weather conditions, the controller supplies maximum voltage to the variable speed fans during the 2 seconds immediately following each start-up.

DE-ICING CYCLE

A de-icing cycle is provided for de-icing stage 2 variable-speed fans in cold weather conditions.

FOUR INDEPENDENT TEMPERATURE PROBE INPUTS

Up to four temperature probes can be connected to the controller in order to obtain a more accurate reading of the average room temperature and a faster reaction time.

OVERLOAD AND OVERVOLTAGE PROTECTION

Fuses are installed at the input and outputs of the controller to protect its circuitry in the case of an overload or overvoltage.

COMPUTER CONTROL

The controller can be connected to a computer, thus making it possible to centralize the management of information and diversify control strategies.

OVATION 22


CONTROL OF AIR INLET MOVEMENT

If the OVATION 22 is used in combination with a DWR-F-1A controller, the movement of the air inlets can be coordinated with the operation of the fans using a potentiometer located on the panel drive. This allows the air inlets to be adjusted correctly, without the influence of uncontrollable factors such as wind or air from adjoining rooms.

TEST MODE

A test mode allows you to simulate temperature changes and verify controller performance.

LOCATION OF THE CONTROLS

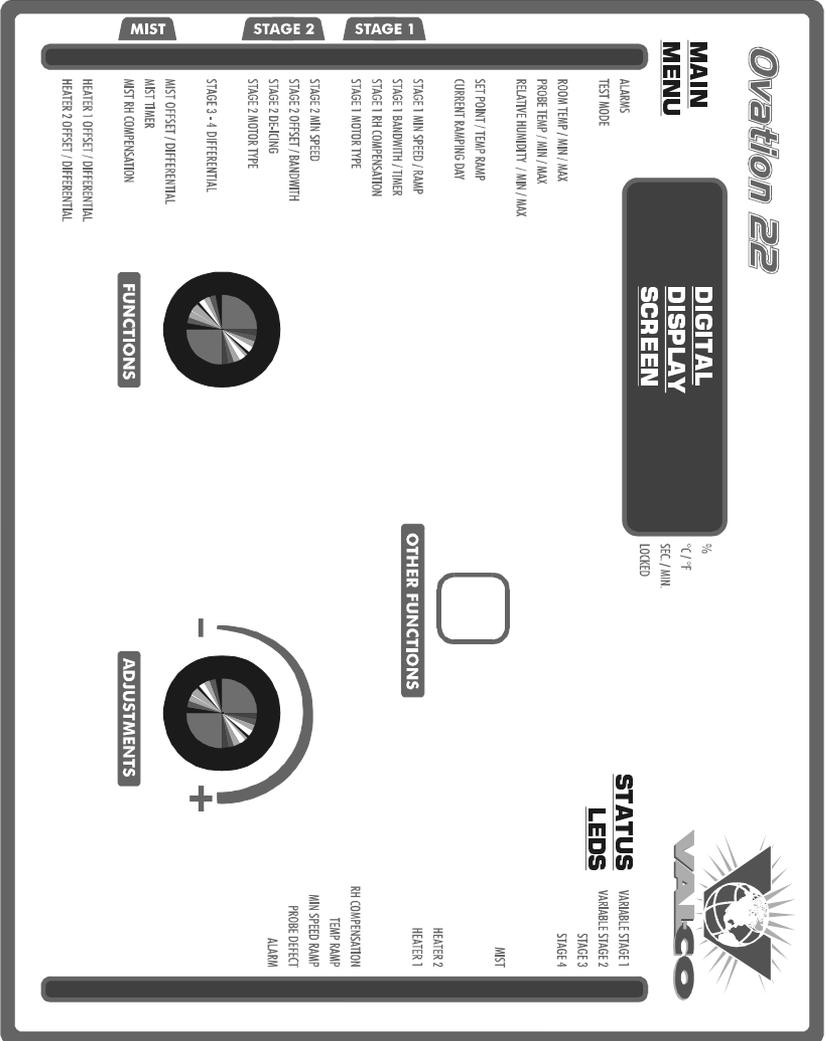


Controller Status LEDs

LED	MEANING
VARIABLE STAGE 1	Turns on when variable stage 1 fans are on.
VARIABLE STAGE 2	Turns on when variable stage 2 fans are on.
STAGES 3-4	Turns on when the respective stage is on.
MIST	turns on when the mist output is on.
HEATER 1	Turns on when heating output 1 is on.
HEATER 2	Turns on when heating output 2 is on.
RH COMPENSATION	Turns on when a RH compensation function is on.
TEMP RAMP	Turns on when the temperature curve is activated.
MIN SPEED CURVE	Turns on when the minimum speed curve is activated.
PROBE DEFECT	Turns on when a probe is defective.
ALARM	Turns on when an alarm condition is detected.

Internal Switches

Internal switches are located on the inside of the front cover. All switches are set to OFF when the controller is shipped from the factory,

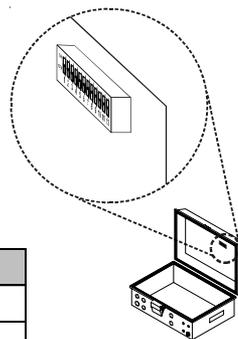

#	OFF	ON
1	Unlocked parameters	Locked parameters
2	Fahrenheit degrees	Celsius degrees
3	Probe 2 disabled	Probe 2 enabled
4	Probe 3 disabled	Probe 3 enabled
5	Probe 4 disabled	Probe 4 enabled
6	No heating stage	With heating stage(s)
7	1 heater	2 heaters
8	Cascading heaters	Zoned heaters
9	Mist deactivated	Mist activated
10	Adjustable hysteresis	Fix hysteresis of 2.0°F
11	De-icing disabled	De-icing enabled
12	Switch from OFF to ON to acces the transfer menu	

Mounting Instructions

Open the latch and lift the cover. Remove the black caps located on each of the four mounting holes. Mount the enclosure on the wall using four screws. Be sure the electrical knockouts are at the bottom of the enclosure in order to prevent water from entering the controller. Insert the screws in the mounting holes and tighten. Fasten the four black caps provided with the controller onto the four mounting holes. The enclosure must be mounted in a location that will allow the cover to be completely opened right up against the wall.

Connections

To connect the controller, refer to the wiring diagram enclosed with this user's manual.

- Set the voltage switch to the appropriate voltage.
- Use the electrical knockouts provided at the bottom of the enclosure. Do not make additional holes in the enclosure, particularly on the side of the enclosure when using a computer communications module.
- If Stage 3 or 4 is used for heating, it may be necessary to install a transformer in order to supply the appropriate voltage to the heating unit.

ALARM CONNECTION: There are two types of alarms on the market. One type activates when current is cut off at its input, whereas the other activates when current is supplied at its input. For an alarm of the first type, use the NO terminal as shown on the wiring diagram. For an alarm of the second type, use the NC terminal.



ALL WIRING MUST BE DONE BY AN AUTHORIZED ELECTRICIAN AND MUST COMPLY WITH APPLICABLE CODES, LAWS AND REGULATIONS. BE SURE POWER IS OFF BEFORE DOING ANY WIRING TO AVOID ELECTRICAL SHOCKS AND EQUIPMENT DAMAGE.

Motor Types

The relationship between the voltage supplied to a motor and its operating speed is described by a motor curve. This curve varies with the make and capacity of the motor. The various motors available in the industry have been divided into ten categories and the controller has been programmed with a different motor curve for each of these categories. To ensure that the controller supplies the correct voltages, an appropriate curve must be selected for stage 1 and stage 2 according to the type of fan motors used.

1

Selecting a Motor Type for Stage 1 and Stage 2


Refer to the list of motors enclosed with this user's to choose the proper motor type.

- Set the function to **STAGE 1 MOTOR TYPE** or to **STAGE 2 MOTOR TYPE**. The motor type of the selected stage is displayed, alternating with the letters "tYPE".
- Press the push-button once. The motor type flashes.
- Use the adjustment knob to adjust the motor type to the desired value.
- Press the push-button once again to validate the new value.


Heating / Cooling Option

Stages 3 and 4 can operate as heating or cooling stages. Enable the proper number of cooling and heating stages with internal switches #6 and #7:


- Set switches # 6 and # 7 to **OFF** to use both stages for cooling.

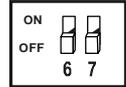

- Set switch # 6 to **ON** and switch # 7 to **OFF** to use Stage 4 for heating and Stage 3 for cooling.

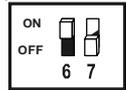

- Set switches # 6 and # 7 to **ON** to use both stages for heating.

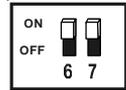

Note that if only one stage is used for heating, it must be Stage 4.

Temperature Probes

1 Connecting the Probes


The controller is supplied with one temperature probe connected to input # 1. Up to three additional probes can be connected to the controller in order to obtain a more accurate reading of the average room temperature and a faster reaction time.

- Use inputs # 2, 3 and 4 to connect additional probes, as shown on the wiring diagram enclosed.

CAUTION: Probes operate at low voltage and are isolated from the supply. Be sure that probe cables remain isolated from all high voltage sources. In particular, do not route the probe cables through the same electrical knockout as other cables. Do not connect the shield from the probe cable to a terminal or a ground.

Switches are used to activate or deactivate the additional probes connected to the controller.

- Activate each additional probe by setting the appropriate switch to **ON**:
 - Switch # 3 activates the probe connected to input # 2.
 - Switch # 4 activates the probe connected to input # 3.
 - Switch # 5 activates the probe connected to input # 4.

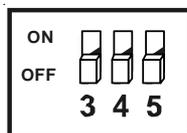

2 Extending the Probes

Each probe can be extended up to 500 feet (150 meters). To extend a probe:

- Use a shielded cable of outside diameter between 0.245 and 0.260 in (6.22 and 6.60 mm) (the cable dimensions should not be under 18 AWG) to ensure the cable entry is liquid tight. Do not ground the shielding.
- It is preferable to solder the cable joint to ensure a proper contact between the two cables.

CAUTION: Do not run probe cables next to other power cables. When crossing over other cables, cross at 90°.

3 Defective Probes

If a defective probe is detected, the Defective Probe Pilot Light turns on. The room temperature shown on the display corresponds to the average temperature measured by the probes in working condition.

To identify the defective probe:

- Set the function to **PROBE TEMP / MIN / MAX**. If the probe connected to input # 1 is not defective, the letters "PR1" are displayed, alternating with the on/off state of the probe and the temperature measured by the probe. If the probe is defective, the letters "PR1" are displayed, alternating with the state of the probe and the letter "P".
- Press the push-button to step to the following probe.
- Proceed as explained above to make sure all probes are in working order.

CHANGING THE PARAMETER SETTINGS

Using the Display

Flashing Values:

The display will flash in certain cases and not in others. The flashing indicates that the value shown can be adjusted. A value that is not flashing cannot be adjusted.



Relative and Absolute Values:

Some parameter adjustments are displayed both as a relative value and an absolute temperature. This applies all heating and cooling differentials, the mist differential and the heater offset. The parameter is first displayed as a relative value. The corresponding absolute temperature is displayed after six seconds if no action is taken by the user. The absolute value is the temperature at which the stage turns on (except in the case of the heater and mist offsets where the value displayed is the temperature at which the stage turns off). If the user turns the adjustment knob, the relative value reappears. For example, when the user turns the selection knob to a differential position, i.e. DIFFERENTIALS 3-4, the sequence is as follows:

- (i) The current differential for stage 3 flashes on the display, alternating with "3 dIF".



- (ii) If, after about 6 seconds, no action is taken by the user, the absolute temperature value is displayed, alternating with "St 3 On". In this case, the absolute value is: Set Point + Bandwidth 1 + Offset 2 + Bandwidth 2 + Differential 3.



(iii) When the user turns the adjustment knob to make an adjustment to the stage 3 differential, the relative value reappears on the display.




Locking the Parameter Settings

The parameter settings can be locked to prevent accidentally modifying them. When the settings are locked, only the temperature set point and the Stage 1 minimum ventilation speed can be modified (as long as the temperature ramp and the minimum ventilation speed ramp are deactivated respectively).


To lock the parameter settings:

- Set internal switch # 1 to **ON**. The Locked Parameter Pilot Light turns on.

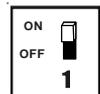

To unlock the parameter settings:

- Set internal switch # 1 to **OFF**. The Locked Parameter Pilot Light turns off.

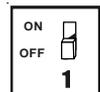

TEMPERATURE SETTINGS

Temperature Units

Temperatures can be displayed in either Celsius or Fahrenheit units

- Set internal switch # 2 to the desired position:

ON: to display temperatures in Celsius units.

OFF: to display temperatures in Fahrenheit units.



Viewing Temperatures

1 Viewing the Room Temperature

The room temperature is the average value of all temperatures measured by activated probes in proper operating condition.

- Set the function to **ROOM TEMP MIN / MAX**. The average room temperature is displayed.

2 Viewing Probe Temperatures

The controller can display probe temperatures individually. Probes can also be turned on or off to control the temperature in different parts of the building.

- Set the function to **PROBE TEMP / MIN / MAX**. The temperature reading of probe 1 is displayed, alternating with the letters "Pr 1" and the on/off state of the probe.
- For each additional probe, press the push-button. The temperature reading of probe x is displayed, alternating with the letters "Pr x" and the on/off state of the probe, etc.

3 Viewing Min/Max Room Temperatures

Follow this procedure to see the lowest and highest room temperature values that have been recorded since the last reset.

- Set the function to **ROOM TEMP MIN / MAX**. The average room temperature is displayed.
- Turn the adjustment knob clockwise by one notch. The maximum room temperature is displayed, alternating with the letters "Hi".
- Turn the adjustment knob counterclockwise one notch. The room temperature is displayed once again.
- Turn the adjustment knob counterclockwise one notch further. The minimum room temperature flashes on the display, alternating with the letters "Lo". If any minimum or maximum temperature reading is out of range, the controller displays the letter "P" instead of displaying a temperature.

NOTE: If you let the display flash for more than 10 seconds, the controller resets the minimum and maximum temperatures currently in memory (the display stops flashing to indicate that the reset has been done).

4 Viewing Min/Max Probe Temperatures

Follow this procedure to see the lowest and highest temperature readings that have been recorded by each probe since the last reset.

- Set the function to **PROBE TEMP / MIN / MAX**. The temperature reading of probe 1 is displayed, alternating with the letters "Pr 1" and the on/off state of the probe.
- Turn the adjustment knob clockwise by one notch. The maximum temperature of probe1 is displayed, alternating with the letters "Pr1 Hi".

OVATION 22

- Turn the adjustment knob counterclockwise one notch. The current temperature of probe 1 is displayed once again.
- Turn the adjustment knob counterclockwise one notch further. The minimum temperature of probe 1 flashes on the display, alternating with the letters "Pr1 Lo".
- Turn the adjustment knob clockwise by one notch. The current temperature of probe 1 is displayed once again.
- Press the push-button to select another probe then proceed as explained above to see the minimum and maximum temperature readings of the desired probe.

NOTE: If you let the display flash for more than 10 seconds, the controller resets the minimum and maximum temperatures of the selected probe (the display stops flashing to indicate that the reset has been done).

Temperature Set Point

The temperature set point is the target room temperature. It can be adjusted between -40.0°F and 120.0°F (-40.0°C and 48.9°C).


Adjusting the Temperature Set Point

- Set the function to **SET POINT/TEMP RAMP**. The current set point flashes on the display.
- Use the adjustment knob to adjust the set point to the desired value.

NOTE: The temperature set point can only be adjusted while the temperature ramp is deactivated (see following section).

Temperature Ramp

The user can define a temperature ramp to adjust the set point automatically over a given time period.

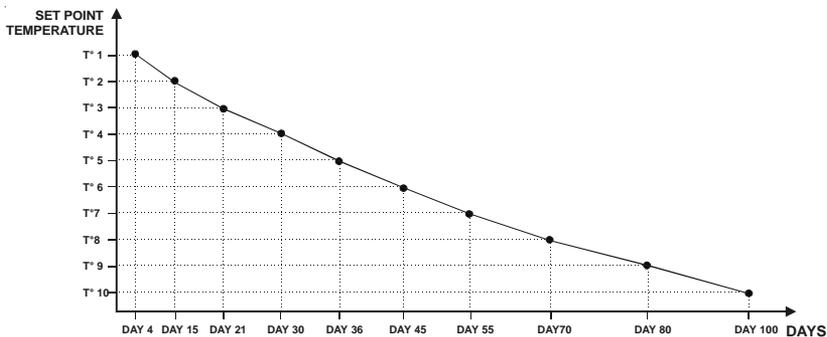

A ramp is defined using ten points. Each point specifies a day number and a set point for that day. Once the points of the ramp are defined, the ramp must be activated. The controller will change the temperature set point every hour in a linear fashion between consecutive points of the ramp. When the last point of the ramp is reached, the temperature set point for that day is maintained until the ramp is reactivated.

NOTES :

i) All ten points of the ramp must be specified. If ten points are not needed, repeat the last temperature value for each unnecessary point.

ii) Certain restrictions apply to reduce the risk of errors:

- The highest possible day number is 255.
- Decreasing day numbers are not allowed.
- Increasing temperatures are not allowed.
- The temperature variation cannot exceed 3° F (1.6° C) per day.

1 Specifying the Ramp

The points of the ramp can only be modified while the ramp is disabled. Refer to the 4th section of this chapter to disable the ramp.

- Set the function to **SET POINT/TEMP RAMP**. The current temperature set point flashes on the display – the value does not flash if the ramp is activated. Refer to the 4th section of this chapter to disable the ramp.

Repeat the following steps for each of the ten points (point 0 to point 9):

- Press the push-button. The day number of the first point of the ramp (point 0) is displayed "d0 x" (where "x" is the day number).
- Using the adjustment knob, set the day number of the first point of the ramp to the desired value.
- Press the push-button once again. The temperature set point associated with the first point of the ramp (point 0) is displayed "t0".
- Using the adjustment knob, adjust the set point of the first point of the ramp to the desired value.

Once all points of the ramp are defined, activate the ramp as explained below.

2 Activating the Temperature Ramp

If you have just finished specifying the points on the ramp:

- Press the push-button once again. The word **OFF** flashes on the display.
- Turn the adjustment knob clockwise one notch. The word **ON** flashes on the display and the Temperature Ramp Pilot Light flashes, indicating that the temperature ramp is now activated.

If you have previously defined the points on the ramp:

- Set the function to **SET POINT/TEMP RAMP**. The current temperature set point flashes on the display.
- Press the push-button to display all points of the ramp until the word **OFF** appears (twenty-one clicks).
- Turn the adjustment knob clockwise one notch. The word **ON** flashes on the display and the Temperature Ramp Pilot Light is lit, indicating that the temperature ramp is now activated.

3 Adjusting the Day Number

The current day number can be adjusted in order to move forward or backward on the temperature and minimum ventilation speed ramps.

- Set the function to **CURRENT RAMPING DAY**. The current day number is displayed, alternating with the letters "day".
- Use the adjustment knob to set the day number to the desired value.


4 Deactivating the Temperature Ramp

- Set the function to **SET POINT/TEMP RAMP**. The current temperature set point is displayed.
- Press the push-button to display the points of the ramp actually defined until the word **ON** appears (twenty-one clicks).
- Turn the adjustment knob counterclockwise one notch. The word **OFF** flashes on the display and the Temperature Ramp Pilot Light turns off indicating that the temperature ramp is now deactivated.

VENTILATION SETTINGS

Cooling Operation

The OVATION 22 controls two stages of variable-speed fans (Stages 1-2) and two optional stages of constant-speed fans (Stages 3-4).

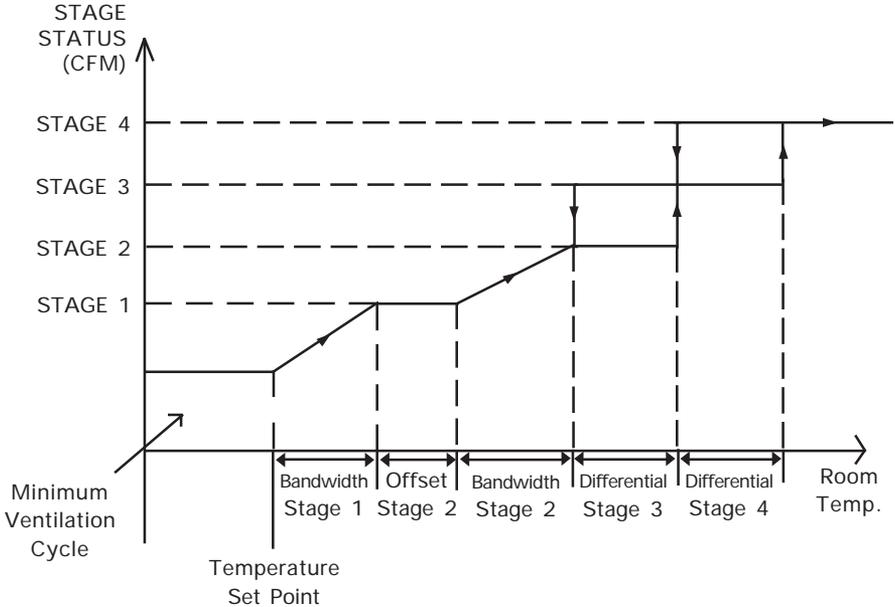

If room temperature rises:

- When **room temperature** < **Set Point**, stage 1 fans run at minimum speed according to the minimum ventilation cycle.
- **At Set Point**: stage 1 fans stop operating according to the minimum ventilation cycle and increase in speed as the room temperature rises.
- **At Set Point + Bandwidth 1**: stage 1 fans reach full speed.
- **At Set Point + Bandwidth 1 + Stage 2 Offset**: stage 2 fans start running.


- **At Set Point + Bandwidth 1 + Stage 2 Offset + Bandwidth 2:** stage 2 fans reach maximum speed.
- **At Set Point + Bandwidth 1 + Stage 2 Offset + Bandwidth 2 + Differential 3:** stage 3 fans start running.
- **At Set Point + Bandwidth 1 + Stage 2 Offset + Bandwidth 2 + Differential 3 + Differential 4:** stage 4 fans start running.

If the room temperature decreases*:

- **At Set Point + Bandwidth 1 + Stage 2 Offset + Bandwidth 2 + Differential 3:** stage 4 fans return to a stop.
- **At Set Point + Bandwidth 1 + Stage 2 Offset + Bandwidth 2:** stage 3 fans return to a stop; stage 2 fans start decreasing in speed as the temperature decreases.
- **At Set Point + Bandwidth 1 + Stage 2 Offset - 0.3°F:** Stage 2 fans return to a stop.
- **At Set Point + Bandwidth 1:** Stage 1 fans start decreasing in speed as the temperature decreases.
- **At Set Point:** Stage 1 fans reach minimum speed.
- **Below the Set Point:** Stage 1 fans stop operating continuously and operate according to the minimum ventilation cycle at minimum speed.


*** USING A FIX HYSTERESIS ON VENTILATION STAGES:**

This function allows deactivating On/Off fan stages when the temperature decreases 2°F (1.1°C) below a stage's differential. Set the internal switch #10 to ON to activate this function.

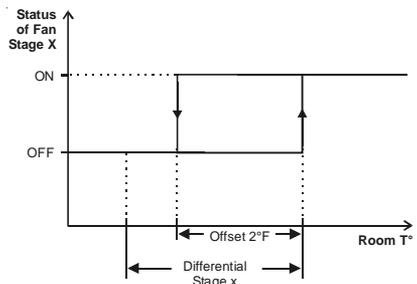

Minimum Ventilation Cycle

When the room temperature is below the set point, the fans of stage 1 operate according to the minimum ventilation cycle. Running the fans even though ventilation is not required for a cooling purpose is useful to reduce humidity levels and supply oxygen to the room. It also prevents the fans from freezing in winter.

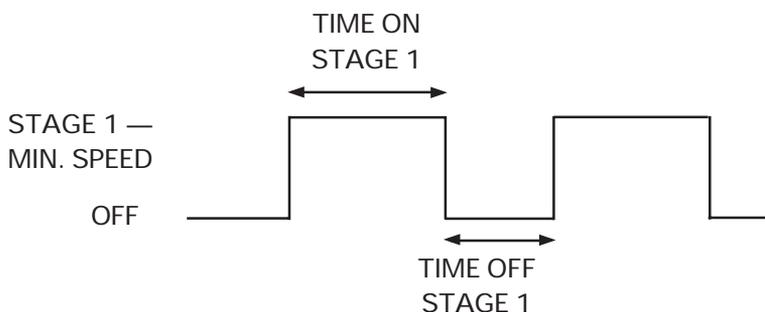

During the Time On, the fans of stage 1 run at their minimum speed and the pilot light of stage 1 is lit; during the Time Off, the fans return to a stop and the pilot light turns off. Note that the minimum speed of stage 1 can automatically be adjusted over time with a ramp (see below).

NOTE: The controller supplies maximum voltage to the variable-speed fans for 2 seconds immediately following each start-up.

Minimum Ventilation Cycle Settings

1. To run the fans continuously at minimum speed, set the Time Off to zero and Time On to any value other than zero.
2. To stop the fans, set the Time On to zero and Time Off to any value.
3. To run the fans intermittently, set the Time On to the desired running time and Time Off to the desired off time.

1 Adjusting the Minimum Speed of Stage 1

The minimum speed can be adjusted between 10 and 100%.

- Set the function to **STAGE 1 MIN SPEED/RAMP**. The minimum speed of stage 1 flashes on the display, alternating with the letters "**SPEEd**".
- Use the adjustment knob to adjust the minimum speed to the desired value.

NOTE: This speed can only be adjusted if the minimum speed ramp is disabled (see Minimum Ventilation Ramp chapter).


2 Adjusting the Minimum Ventilation Timer

Time on and Time Off can be adjusted between 0 and 900 seconds, in increments of 15 seconds.

- Set the function to **STAGE 1 BANDWIDTH/TIMER**. The current bandwidth of stage 1 flashes on the display "**BAnd**".
- Press the push-button. The current Time On of stage 1 flashes on the display "**t. On**".
- Use the adjustment knob to adjust the Time On to the desired value.
- Press the push-button. The current Time Off of stage 1 flashes on the display "**t. Off**".
- Use the adjustment knob to adjust the Time Off to the desired value.

Humidity Compensation

The minimum speed of stage 1 can automatically be adjusted as a function of relative humidity. As humidity increases, the minimum speed increases proportionally to compensate for the change. At humidity levels at or below the humidity set point, the minimum speed is equal to the normal uncompensated speed. The user specifies the percentage increase in minimum speed for a relative humidity equal to the humidity set point + 10%. For example, if the minimum speed is 40% and the compensation adjustment is 30%, the minimum speed will be adjusted to 70% of full speed when the humidity rises 10% above the humidity set point. In addition to adjusting the minimum speed, the humidity compensation feature also changes the operation of the minimum ventilation cycle: if the controller is operating in minimum ventilation mode when the relative humidity exceeds the humidity set point, the minimum ventilation fans are operated continuously rather than cycled.

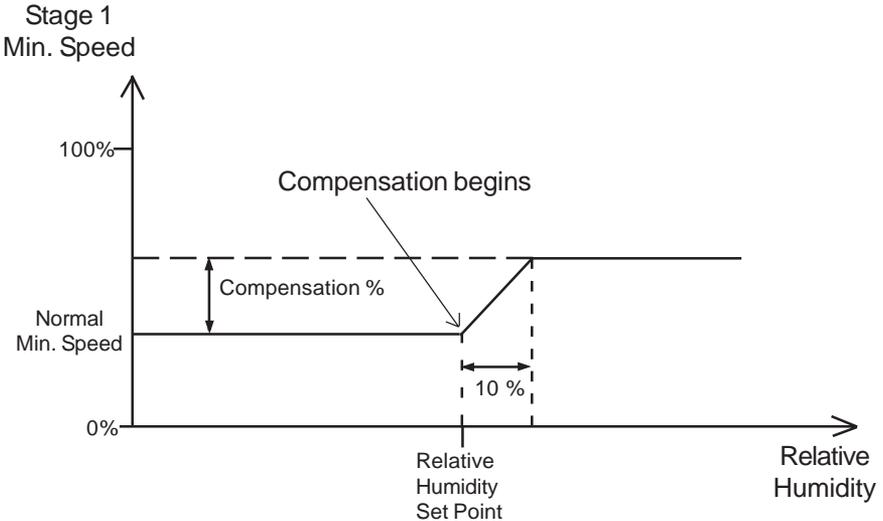

When a compensation is applied to the minimum speed, the compensation pilot light turns on.

1 Viewing the Relative Humidity

The relative humidity is expressed as a percentage.

- Set the function to **RELATIVE HUMIDITY MIN/MAX**. The current relative humidity is displayed.
- Turn the adjustment knob clockwise by one notch. The maximum humidity reading flashes on the display, alternating with the letters "rH Hi".
- Turn the adjustment knob counterclockwise one notch the current humidity level is displayed once again.
- Turn the adjustment knob counterclockwise one notch further. The minimum humidity reading flashes on the display, alternating with the letters "rH Lo".

NOTE: If you let the display flash for more than 10 seconds when the maximum or minimum humidity is displayed, the controller resets the minimum and maximum humidity values currently in memory (the display stops flashing to indicate that the reset has been done).

2 Adjusting the Relative Humidity Set Point

When the relative humidity exceeds the humidity set point, the minimum speed of stage 1 fans is increased by a proportional amount to compensate for the increase in humidity. Note that the humidity compensation feature must be activated for this to work.

- Set the function to **STAGE 1 RH COMPENSATION**. The relative humidity set point is displayed alternating with the letters "Set".
- Use the adjustment knob to adjust the set point to the desired value.

3 Adjusting the Minimum Speed Compensation

This is the increase in the minimum speed for a relative humidity equal to the humidity set point + 10%. It ranges from 0 to 100%.

- Set the function to **STAGE 1 RH COMPENSATION**. The relative humidity set point is displayed alternating with the letters "Set".
- Press the push-button. The current minimum speed compensation is displayed, alternating with the letters "SPEEd".
- Use the adjustment knob to adjust the minimum speed compensation to the desired value.


4 Activating/Deactivating Humidity Compensation

- Set the function to **STAGE 1 RH COMPENSATION**. The relative humidity set point is displayed alternating with the letters "Set".
- Press the push-button twice. The current on/off state of humidity compensation flashes on the display.
- Use the adjustment knob to adjust the on/off state to the desired value.

Minimum Ventilation Speed Ramp

The user can define a minimum ventilation speed ramp to adjust the minimum speed of stage 1 automatically over a given time period. A ramp is defined by ten points and each point specifies a day number and a fan speed for that day. Once the points are defined, the minimum speed ramp must be activated. When the minimum speed ramp is activated, the controller adjusts the minimum speed of state 1 fans every hour in a linear fashion between two consecutive points.

When the last point of the ramp is reached, the ramp is deactivated. The controller maintains the minimum speed specified for this point until the ramp is reactivated or until a new single minimum speed is specified using the first method.

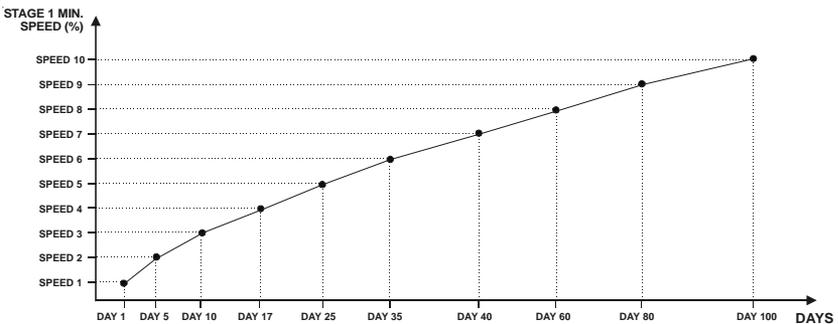

NOTES:

- i) The minimum speed ramp must be deactivated before specifying the points on the ramp (see below).
- ii) All ten points of the ramp must be specified. If you do not need ten different points, repeat your last minimum speed for each unnecessary point of the ramp.
- iii) Certain restrictions apply to reduce the risk of errors:
 - decreasing minimum speeds are not allowed.
 - the min. speed variation cannot exceed 10% per day.

1 Specifying the Minimum Speed Ramp

The points of the ramp can only be modified while the ramp is disabled. Refer to the 4th section of this chapter to disable the ramp.

- Set the function to **STAGE 1 MIN SPEED/RAMP**. The current minimum speed of stage 1 flashes on the display – the value does not flash if the ramp is activated. Refer to the 4th section of this chapter to disable the ramp.

Repeat the following steps for each of the ten points (point 0 to point 9):

- Press the push-button. A day number is displayed, alternating with the word "dO x" (where "x" is the day number).
- Using the adjustment knob, set the day number of the first point of the ramp to the desired value.
- Press the push-button once again. The minimum speed of the first point (point 0) is displayed "PO x" where x represents the speed.
- Use the adjustment knob to adjust the minimum speed of the first point of the ramp to the desired value.

2 Activating Minimum Speed Ramp

If you have just finished specifying the points on the ramp:

- Press the push-button once again. The word **OFF** flashes on the display.
- Turn the adjustment knob clockwise by one notch. The word **ON** flashes on the display and the Minimum Speed Ramp Pilot Light turns on, indicating that the minimum speed ramp is now activated.

If you have previously specified the points on the ramp:

- Set the function to **STAGE 1 MIN SPEED/RAMP**. The current minimum speed flashes on the display.
- Press the push-button to display the points of the ramp currently defined until the word **OFF** appears (twenty-one clicks).
- Turn the adjustment knob clockwise by one notch. The word **ON** flashes on the display and the Minimum Speed Ramp Pilot Light turns on, indicating that the minimum speed ramp is now activated.

3 Adjusting the Day Number

The current day number can be adjusted in order to move forward or backward on the temperature and minimum ventilation speed ramps.

- Set the function to **CURRENT RAMPING DAY**. The current day number is displayed, alternating with the letters "**day**".
- Use the adjustment knob to set the day number to the desired value.

4 Deactivating Minimum Speed Ramp

- Set the function to **STAGE 1 MIN SPEED/RAMP**. The current minimum speed flashes on the display.
- Press the push-button to display the points of the ramp currently defined until the word **ON** appears (twenty-one clicks).
- Turn the adjustment knob counterclockwise by one notch. The word **OFF** flashes on the display. The Minimum Speed Ramp Pilot Light turns off, indicating that the minimum speed ramp is now deactivated.

Differential Settings

Refer to the diagram at the beginning of the ventilation chapter for further information on the following parameters.

1 Adjusting the Bandwidth of Stage 1

The Stage 1 bandwidth is the temperature interval over which the speed of variable stage 1 fans increases or decreases proportionally to the temperature. The bandwidth can be adjusted between 0.5° F and 20.0° F (0.3° C and 11.1° C).

- Set the function to **STAGE 1 — BANDWIDTH/TIMER**. The current bandwidth of stage 1 flashes on the display, alternating with the letters "**BAnd**".
- Use the adjustment knob to adjust the bandwidth to the desired value.

2 Adjusting the Offset of Stage 2

The offset of stage 2 is the temperature difference from the end of stage 1 (set point + bandwidth of stage 1) at which stage 2 fans start running at their minimum speed. The offset can be adjusted between 0° F and 20.0° F (0° C and 11.1° C).

- Set the function to **STAGE 2 OFFSET/BANDWIDTH**. The current offset of Stage 2 flashes on the display, alternating with the letters "**OFSET**".
- Use the adjustment knob to adjust the offset to the desired value.

3 Adjusting the Bandwidth of Stage 2

The bandwidth of Stage 2 is the temperature interval over which the speed of variable stage 2 fans increases or decreases proportionally to the temperature. The bandwidth can be adjusted between 0.5° F and 20.0° F (0.3° C and 11.1° C).

- Set the function to **STAGE 2 OFFSET/BANDWIDTH**. The current offset of Stage 2 flashes on the display, alternating with the letters "OFSET".
- Press the push-button. The current bandwidth of Stage 2 is displayed, alternating with the letters "BAnd".
- Use the adjustment knob to adjust the bandwidth to the desired value.

4 Adjusting the Minimum Speed of Stage 2

The minimum speed of stage 2 fans can be adjusted between 10% and 100%.

- Set the function to **STAGE 2 MIN SPEED**. The minimum speed of stage 2 flashes on the display, alternating with the letters "SPEEd".
- Use the adjustment knob to adjust the minimum speed to the desired value.


5 Adjusting the Differentials of Stage 3 - 4

The differentials of Stage 3-4 are the temperature differences between the moment the fans start running and the moment they stop. Stage 3-4 differentials can be adjusted between 0.5° F and 20.0° F (0.3° C and 11.1° C).

- Set the function to **STAGES 3-4 DIFFERENTIAL**. The current differential of Stage 3 flashes on the display, alternating with the letters "**3 diF**".
- Use the adjustment knob to adjust it to the desired value.
- Press the push-button. The current differential of Stage 4 flashes on the display, alternating with the letters "**4 diF**".
- Use the adjustment knob to adjust it to the desired value.

De-icing of Stage 2 Fans

Stage 2 fans can automatically be de-iced in cold weather conditions. When a de-icing cycle starts, Stage 1 fans are stopped then stage 2 fans start running at full speed for 2 seconds. Stage 2 fans then run at the minimum speed of stage 2 during the **de-icing time**. Once the de-icing time has elapsed, stage 2 fans stop and the operation of stage 1 is resumed. Set internal switch #11 to ON to activate this function.

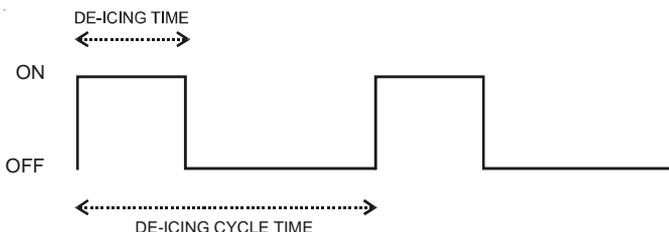

1 Adjusting the De-icing Cycle Time

The de-icing cycle time is the time lapse between de-icing cycles. It ranges from 1 to 720 minutes. Note that the cycle time must be greater than the de-icing On Time.

- Set the function to **STAGE 2 DE-ICING** the current de-icing cycle time is displayed, alternating with the letters "**CYCLE**".
- Use the adjustment knob to adjust the cycle time to the desired value.

2 Adjusting the De-icing On Time

The de-icing duration ranges from 0 to 900 seconds. Note that the de-icing On Time must be shorter than the cycle time.

- Set the function to **STAGE 2 DE-ICING** the current de-icing cycle time is displayed, alternating with the letters "CYCLE".
- Press the push-button. The current de-icing time is displayed, alternating with the letters "t On".
- Use the adjustment knob to adjust the de-icing time to the desired value.


OVATION 22

Mist Cooling

The last cooling stage can be used as a mist stage. Set internal switch #9 to ON to activate this stage. The number of heating stages determines which stage is used for misting:

<u>NUMBER OF HEATING STAGES</u>	<u>MIST STAGE</u>
0	4
1	3
2	None

Note that the mist stage cannot be used if two heating stages are enabled.

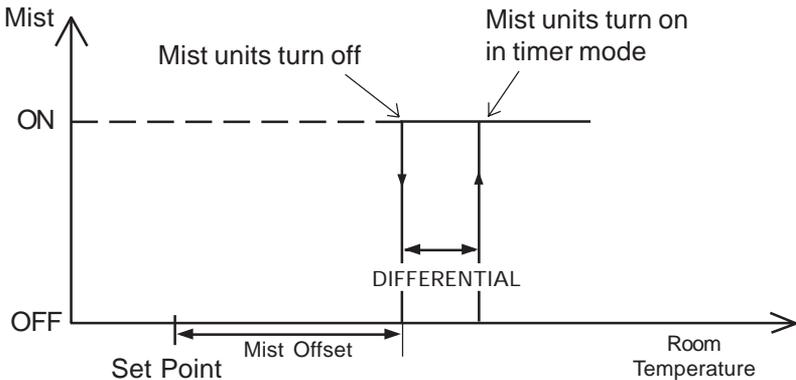

Mist units start running according to a timer cycle (Time On and Time Off) when their start temperature is reached (Set Point + Mist Offset + Differential).

If the humidity compensation is activated, the mist units are shut off when the humidity level is too high.

1 Adjusting the Mist Differential

The mist differential is the variation in room temperature between the moment the mist units turn on and the moment they turn off. It can be adjusted between 0.5° F and 20.0° F (0.3° C and 11.1° C).

- Set the function to **MIST OFFSET/DIFFERENTIAL**. The mist offset is displayed, alternating with the letters "OFSEt".
- Press the push-button. The mist differential is displayed, alternating with the letters "dIF",
- Using the adjustment knob, set the differential to the desired value.

2 Adjusting the Mist Offset

The mist offset is the temperature difference from the set point at which the mist units turn off. It can be adjusted between 0.5° F and 40.0° F (0.3° C and 22.2° C).

- Set the function to **MIST OFFSET/DIFFERENTIAL**. The mist offset is displayed, alternating with the letters "OFSEt".
- Using the adjustment knob, set the offset to the desired value.

3 Adjusting the Mist Timer Settings

The timer's On Time can be adjusted from 0 to 900 seconds, in increments of 15 seconds; the Off Time can be adjusted from 0 to 60 minutes. To deactivate mist cooling, set the Time On to zero.

- Set the function to **MIST TIMER**. The current Time On for the mist cycle is displayed, alternating with the letters "t On".
- Use the adjustment knob to set the Time On to the desired value (in minutes).
- Press the push-button. The current Time Off for the mist cycle is displayed, alternating with the letters "t Off".
- Use the adjustment knob to set the Time Off to the desired value (in minutes).

4 Adjusting the Mist Shutoff Set Point

The mist shutoff set point is the humidity level above which mist units are disabled. This parameter is only displayed if mist units are enabled (internal switch #9) and if less than 2 heaters are used. The mist shutoff value ranges from 0 to 100% of humidity. Select "No" if you want to disable this function.

- Set the function to **MIST RH COMPENSATION**. The humidity level above which mist units turn off is displayed, alternating with the letters "rH OFF".
- Use the adjustment knob to set the turn off level to the desired value.

HEATER SETTINGS


Set the internal switches as follows to enable the proper number of heating stages:

2 heating stages (stages 3-4):
Set internal switches # 6 and 7 to ON.

1 heating stage (stage 4):
Set internal switch # 6 to ON and # 7 to OFF.

CASCADING HEATERS

When cascading heating is used, the operation of heating stages is based on the average room temperature (internal switch #8 is OFF).

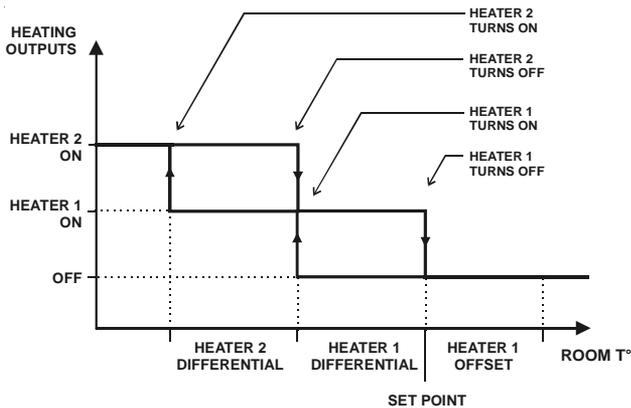

If the room temperature rises:

- at Set Point - Heater 1 Offset - Heater 1 Differential: Heater 2 turns off.
- at Set Point - Heater 1 Offset: Heater 1 turns off.

If the room temperature falls:


- at Set Point - Heater 1 Offset - Heater 1 Differential: Heater 1 turns on.
- at Set Point - Heater 1 Offset - Heater 1 Differential - Heater 2 Differential: Heater 2 turns on.

OVATION 22

ZONED HEATERS


To configure your system for zoned heaters, set internal switch # 8 to ON. Since the two heater outputs function independently, different probes are assigned to each output: Probes 1 and 2 are assigned to Heater 1 and Probes 3 and 4 are assigned to Heater 2. Individual probes can be turned on or off using the internal switch settings. If both probes are activated for a given heater, the average temperature from both probes is used.

Both heating zones can have negative and positive heater offsets. A negative offset is used when controlling heat mats, for example.

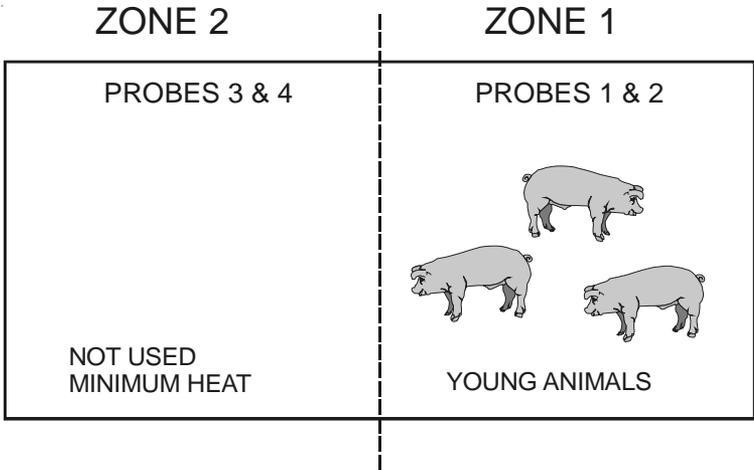

To avoid ventilation problems when using zoned heating, a special protection is built into the device. Suppose the animals are young and confined to one part of the building (zone 1) while the rest of the building is heated at a minimum level (zone 2). If the temperature difference between zones is too great and zone 1 fans operate according to the average temperature for both zones, cooling in zone 1 may be insufficient. A built-in protection will operate the fans according to the probes of the zone with the highest temperature whenever the temperature difference between zones is greater than a user-defined value.

The figure below explains the operation of zoned heaters.

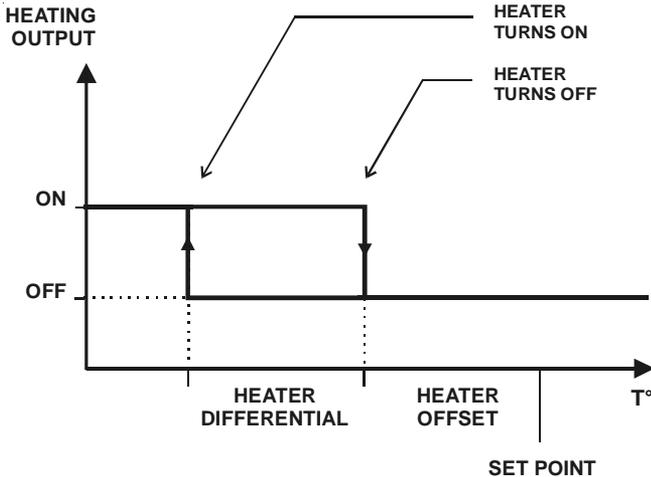

If the room temperature rises:

at Set Point - Heater Offset 1 (Probes 1-2): Heater 1 turns off.

at Set Point - Heater Offset 2 (Probes 3-4): Heater 2 turns off.

If the room temperature falls:

at Set Point - Heater Offset 1 - Differential 1 (Probes 1-2): Heater 1 turns on.

at Set Point - Heater Offset 2 - Differential 2 (Probe 3-4): Heater 2 turns on.

1 Adjusting Heater Offsets

The heater offset can provide substantial energy savings if correctly adjusted according to the outside temperature. This offset represents the number of degrees below the set point at which the heating units turn off (see diagram above). The offset of heaters 1 and 2 can be adjusted from -10°F to 20.0°F (-5.6°C to 11.1°C). If the offset is negative, the heating units will turn off at temperatures above the set point. If cascading heating is used, only Heater 1 offset is used.

- Set selection knob to **HEATER 1 OFFSET/DIFFERENTIAL** or **HEATER 2 OFFSET/DIFFERENTIAL** The current heating offset is displayed, alternating with the letters "OF.SET".
- Use the adjustment knob to adjust the offset to the desired value.

2 Adjusting Heater Differentials

The heating differential is the temperature difference between the moment the heating units turn on and the moment they turn off (see diagram above). It can be adjusted between 0.5° F and 20.0° F (0.3° C and 11.1° C).

- Set the function to **HEATER 1 OFFSET/DIFFERENTIAL** or **HEATER 2 OFFSET/DIFFERENTIAL** The current heater offset is displayed, alternating with the letters "OF.SET".
- Press the push-button. The differential is displayed, alternating with the letters "dIF".
- Use the adjustment knob to adjust the differential to the desired value.

3 Adjusting Max. Temperature Difference Between Zones


When using zoned heating, a built-in protection will operate the fans according to the zone 1 probes whenever the temperature difference between zones is greater than this parameter. The default value is 7.5°F (4.2°C) and values range from 5°F to 40.0°F (2.8°C to 22.2°C).

- Set the function to **HEATER 2 — OFFSET/DIFFERENTIAL**. The current heater offset is displayed, alternating with the letters "OF.SET".
- Press the push-button twice. The maximum temperature difference between zones is displayed, alternating with the letters "Zn diF.".
- Use the adjustment knob to adjust the temperature difference to the desired value.

ALARM SETTINGS

The controller sets off an alarm in the case of a power failure, a fault in the supply circuit or a high or low temperature. Temperature alarms are defined according to the set point as shown in the diagram below.

The alarm can either be set off if the average temperature exceeds the limits or if the reading of a single probe exceeds the limit.

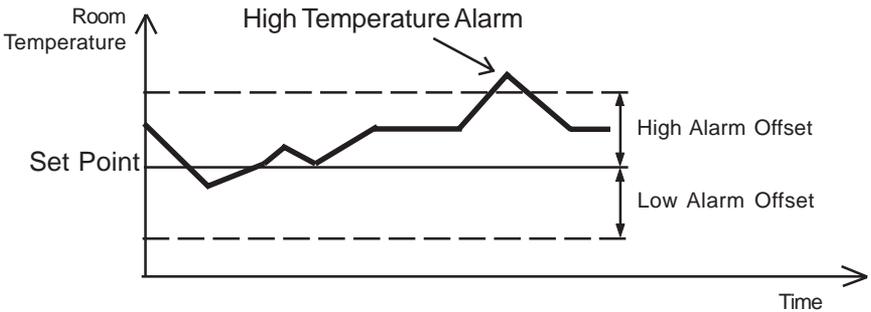

Adjusting the Alarm Settings

The high and low alarm offsets range from 0.5° F to 40° F (0.3 to 22.2° C).

- Set the function to **ALARMS**. The current low alarm offset flashes on the display, alternating with the word "Lo AL". Use the adjustment knob to set it to the desired value.
- Press the push-button. The current high alarm offset flashes on the display, alternating with the word "HI AL". Use the adjustment knob to set it to the desired value.
- Press the push-button. The test mode type "TyPE" is displayed, alternating with the word "ALL" or "Ind".
- Use the adjustment knob to select "ALL" for an alarm to sound when the average temperature exceeds limits; select "Ind" for alarm to sound when the reading of an individual probe exceeds the limits.

TEST MODE

A test mode allows you to simulate temperature changes and verify the performance of your controller. In test mode, the temperature probe inputs are turned off, allowing to change the temperature used by the controller to operate the stages. The controller operates as before using the new temperature settings.

Enable / disable the test mode:

- Set the function to **TEST MODE**. The test mode status is displayed.
- Use the adjustment knob to select the desired test mode status (On or Off).

Setting the test mode temperature:

- Once the test mode is enabled, press the push button. The test mode temperature is displayed, alternating with the letters "tst".

NOTE: If no user activity is recorded after 4 minutes in test mode, the controller resumes normal operation.

TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	SOLUTION
<p>The display doesn't work.</p>	<p>The circuit breaker on the service panel is off or tripped.</p> <p>The wiring is incorrect.</p> <p>The input fuse is open.</p> <p>The voltage selector switch is in the wrong position.</p> <p>The display board interconnect cable is unplugged from the power supply board.</p>	<p>Reset the circuit breaker.</p> <p>Fix the wiring.</p> <p>Replace the fuse.</p> <p>Set the switch to the correct position.</p> <p>Plug the cable.</p>
<p>The display shows the letter "P"</p>	<p>Probe # 1 is improperly connected.</p>	<p>Fix the probe's connection.</p>
<p>The Defective Probe Pilot Light is on.</p>	<p>One or more probes are defective.</p>	<p>Follow the procedure described in DEFECTIVE PROBES to identify and replace the defective probe.</p>
<p>The display shows sudden variations in room temperature.</p>	<p>A variation in resistance is induced on a probe.</p> <p>There is electrical noise near an extended probe cable.</p>	<p>Make sure the probes are dry and move them away from drafts and sources of radiant heating.</p> <p>Do not run probe cables next to other power cables. When crossing other power cables, cross at 90°.</p>

PROBLEM	CAUSE	SOLUTION
<p>Stage 1 or 2 fans are not running.</p>	<p>The wiring is incorrect.</p> <p>The Stage's fuse is open.</p> <p>The display board interconnect cable is not plugged into the power supply board properly.</p> <p>The minimum speed is too low.</p> <p>The fan motor is defective.</p>	<p>Correct the wiring. In particular, make sure two different lines are connected to each motor: line L1 modulated by the controller should be combined with another line (N for 115V or L2 for 230V) to activate the motor. Also, be sure the Stage 1 and 2 COMMON is supplied by line L1.</p> <p>Replace the fuse.</p> <p>Make sure the cable is firmly plugged in with the tabs in place.</p> <p>Adjust the minimum speed to a higher value.</p> <p>Check if motor is defective by connecting it to an alternate power supply. Replace the motor if it still doesn't operate.</p>

OVATION 22

PROBLEM	CAUSE	SOLUTION
<p>Stage 1 or 2 fans run continuously at full speed.</p>	<p>The wiring is incorrect.</p> <p>The ambient temperature is above the set point.</p>	<p>Fix the wiring.</p> <p>Adjust the set point to the desired value.</p>
<p>Stage 1 or 2 fans run erratically.</p>	<p>The selected motor ramp is inappropriate.</p> <p>The differential is too small.</p> <p>The Time On or Time Off is too short.</p>	<p>Select an appropriate motor ramp.</p> <p>Adjust the differential to a higher value.</p> <p>Adjust the Time On or Time Off to a higher value.</p>
<p>Stage 1 fans do not stop running when the controller is operating in minimum ventilation cycle.</p>	<p>Time off is set to zero.</p> <p>The wiring is incorrect.</p> <p>Humidity compensation is activated and relative humidity exceeds set point.</p>	<p>Set the Time Off to a value other than zero.</p> <p>Correct the wiring. In particular, make sure two different lines are connected to each motor: line L1 modulated by the controller should be combined with another line (N for 115V or L2 for 230V) to activate the motor. Also, be sure the stage 1 COMMON is supplied by line L1.</p> <p>Adjust set point or deactivate compensation as required.</p>

PROBLEM	CAUSE	SOLUTION
<p>Stage 3 or 4 is not operating.</p>	<p>The Stage's fuse is open.</p> <p>The display board interconnect cable is not plugged into the power supply board properly.</p> <p>The wiring is incorrect.</p> <p>The fan motor or heating unit is defective.</p> <p>The controller is defective.</p>	<p>Replace the fuse.</p> <p>Make sure the cable is firmly plugged in with the tabs in place.</p> <p>Correct the wiring. In particular, make sure two different lines are connected to each motor: line L1 modulated by the controller should be combined with another line (N for 115V or L2 for 230V) to activate the motor or heating unit. Also, make sure the Stage COMMON is supplied by line L1.</p> <p>Verify if the motor or heating unit is defective by connecting it to an alternate power supply. Replace the motor or heating unit if it still is not operating.</p> <p>Listen to see if there is a clicking sound when the Stage's pilot light turns on. If there is no clicking sound, contact your distributor to repair the controller.</p>

TECHNICAL SPECIFICATIONS

OVATION 22 Supply:

- 115/230 VAC (-18%, + 8%), 50/60Hz, L1 same phases as Stage 1 and 2, overload and overvoltage protection fuse F12-1A fast blow.

Stage 1: Variable output, 115 VAC (3/4 HP) / 230 VAC (1.5 HP), Mot. 10A, 50/60 Hz, fuse F1-15A slow blow.

Stage 2: Variable output, 115 VAC (3/4 HP) / 230 VAC (1.5 HP), Mot. 10A, 50/60 Hz, fuse F2-15A slow blow.

Stage 3: ON-OFF output, 115 / 230 VAC, 30VDC, 50 / 60 Hz, Mot. 10A, heating or cooling, fuse F3-15A slow blow.

Stage 4: ON-OFF output, 115 / 230 VAC, 30VDC, 50 / 60 Hz, Mot. 10A, heating or cooling, fuse F4-15A slow blow.

Alarm: ON-OFF output, 3A, 115/230 VAC, 30VDC, fuse F11-3A slow blow.

Probes: Low voltage (< 5V), isolated from the supply. Operating range: -40.0° to 120.0° F (-40.0° to 48.9° C). Accuracy: 1.8° F (1° C) between 41° and 95° F (5° and 35° C).

Enclosure: ABS, moisture and dust-tight.

The room temperature where the controller is located
**MUST ALWAYS REMAIN BETWEEN 32° AND 104° F (0°
AND 40° C).**

FACTORY SETTINGS

PARAMETER		FACTORY SETTINGS	RANGE OF VALUES
Temperature Set Point		75°F(23.9°C)	-40 to 120,0°F (-40 to 48.9°C)
Stage 1	Minimum Speed	40%	10 % to 100 %
	Time On	0 seconds	0 to 900 seconds in increments of 15 sec.
	Time Off	15 seconds	
	Bandwidth	2°F (1.1°C)	0.5 to 20°F (0.3 to 11.1°C)
Humidity Control	Humidity Set Point	65%	40 to 100%
	Compensation Percentage	60%	0 to 100% of stage 1 minimum speed
Stage 2	Offset	0.5°F (0.3°C)	0 to 20°F (0 to 11.1°C)
	Bandwidth	2°F(1.1°C)	0.5 to 20°F (0.3 to 11.1°C)
	Min. Speed	40%	10 % to 100 %
	De-icing Cycle Time	1 minute	1 to 720 minutes
	De-icing Time	15 seconds	15 to 900 seconds
Stages 3 and 4	Differential	2°F (1.1°C)	0.5 to 20°F (0.3 to 11.1°C)
Mist	Time On	60 seconds	0 to 900 seconds in increments of 15 sec.
	Time Off	10 minutes	0 to 720 minutes
	Offset	14°F (7.8°C)	0.5 to 40°F (0.3 to 22.2°C)
	Differential	2°F (1.1°C)	0.5 to 20°F (0.3 to 11.1°C)
	Mist Shut off humidity level	95%	0 to 100%
	Heater Offset	2.0°F (1.1°C)	-10 to 20°F (-5.7 to 11.1°C)
	Max. Temperature Diff. Between Zones	7.5°F(4.2°C)	5 to 40°F (2.8 to 22.2°C)
Alarms	High Offset	12.0°F(6.7°C)	0.5 to 40°F (0.3 to 22.2°C)
	Low Offset	10.0°F(5.6°C)	0.5 to 40°F (0.3 to 22.2°C)

NOTES:


i) These initial parameter settings will not be retained in the controller's memory. Each new setting will replace the preceding one.

ii) If the power supply is cut off, the last parameter settings will be retained in memory until the power is restored.

MEMORY CARD

The memory card is used to create a backup copy of your controller's configuration. The card is also useful to transfer the configuration of one controller to another controller of the same type.

The switch at the bottom of the card is used to lock or to unlock the card ( = locked,  = unlocked).

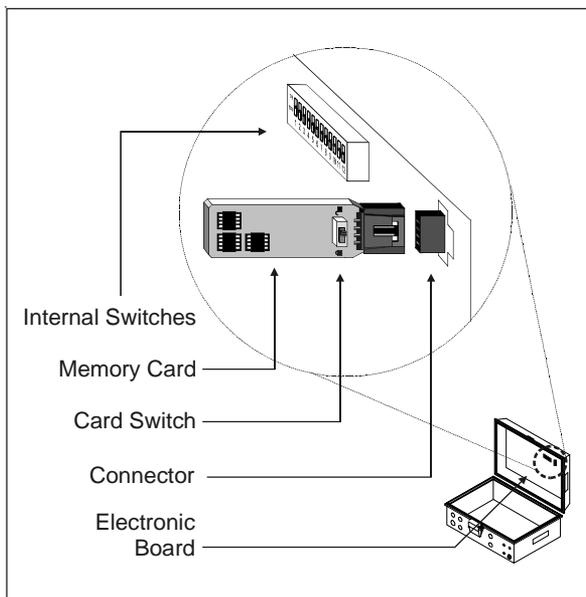

TO TRANSFER A CONFIGURATION:

1. Open the latch and lift the controller's cover.
2. If you are about to copy the controller's configuration on the memory card, make sure the card's switch is at the unlocked position.

3. Insert the card in the connector located on the electric board inside the controller. Refer to the illustration above to position the memory card correctly.

4. If internal switch #12 is at the OFF position, simply switch it to the ON position; if internal switch #12 is at the ON position: return to the OFF position then switch it back to ON again.



5. Close the controller's cover.

6. The transfer menu should be displayed on screen. Use the adjustment buttons to select whether you want to transfer the memory card's content into the controller ("**COPY**" "**to**" "**CTRL**") or if you wish to transfer the controller's content into the memory card ("**COPY**" "**to**" "**CARD**").

7. Once you have chosen the proper type of transfer, press and hold the Other Functions button for 5 seconds. The controller will automatically return to the **ROOM TEMP** menu once the transfer is completed. If the transfer is incorrect, the letters "**COPY**" and "**Error**" will flash on screen. In this case, turn the adjustment knob once to exit the error menu then refer to the table below to see possible error causes.

8. Once the transfer is over, open the controller's cover, and remove the memory card from the connector. Close the controller's enclosure afterwards.

9. Lock the card switch () if required.

Transfer Error:

CAUSE	SOLUTION
The memory card is write protected	If you want to copy the controller's configuration on the memory card, make sure the switch at the bottom of the card is at the unlocked position.
The controller is write protected	If you want to transfer the card's configuration in the controller, make sure internal switch #1 of the controller is at the "OFF" position.
The memory card is blank or its content is incompatible with the controller	Make sure a valid configuration is written on the card before starting a transfer.
The transfer is incomplete	Make sure the memory card is properly inserted in the connector then retry the transfer. Do not move or hold the card while the transfer is ongoing.
	The memory card is defective, try with another card (contact your dealer).
	The connector is defective (contact you dealer).

GLOSSARY

BANDWIDTH: The temperature interval over which the variable-speed fans of a given stage increase or decrease in speed proportionally to the temperature.

CASCADING HEATERS: Heaters operate in a sequence. As the average room temperature drops, additional heaters are turned on as needed.

DEFAULT VALUE: A typical parameter setting defined at the factory.

DIFFERENTIAL: The differential is the temperature difference between the moment the constant-speed fans or heating units of a given stage start running and the moment they return to a stop.

MINIMUM VENTILATION CYCLE: When the room temperature is below the set point, the Stage 1 fans operate intermittently to provide minimum ventilation to the room.

MINIMUM VENTILATION SPEED RAMP: When Stage 1 operates variable-speed fans, they will run at minimum speed during the minimum ventilation cycle. The user can define a minimum ventilation speed ramp to adjust the Stage 1 minimum speed automatically over a given time period. The minimum speed increases over time as the animals grow.

OFFSET: An offset is a temperature difference from the set point that normally defines a cut-off point for a stage operation. For example, a heater offset of 2° F means the heaters will turn off at 2° F below the set point.

STAGE 1 RAMP: When the temperature rises to the point where Stage 1 constant-speed fans are needed for cooling, the running time of the fans is increased gradually from the minimum ventilation settings up to full operation. Likewise, when the temperature drops below the set point, the running time is decreased gradually until the minimum ventilation settings are reached.

OVATION 22

SET POINT: The set point is the target room temperature. When the temperature is above the set point, the controller cools the room by turning on the cooling fans. When the temperature is below the set point, the controller heats the room by turning on the heaters.

TEMPERATURE RAMP: The controller can be set to automatically change the temperature set point over a given period of time in accordance with the user's requirements. The set point decreases over time as the animals grow.

ZONED HEATERS: When zoned heaters are used, heaters in each zone operate according to their own probes rather than the average temperature for the entire room. In this way, heaters across zones are independent of one another.